

QUICK-START GUIDE RELOOP NEON

serato



DJ

Installation and Setup

The Reloop NEON is a class compliant USB plug and play device and requires no further driver installation.


NOTE: The Reloop NEON is an additional controller that will only work in addition to supported Serato DJ hardware. [Click here to see a list of supported Serato DJ hardware.](#)

1. Download and install the latest version of Serato DJ from <http://serato.com/dj/downloads>
2. Connect your supported Serato DJ hardware to a USB port.
3. Connect your Reloop NEON to an available USB Port.
4. Open Serato DJ.

serato



Controller

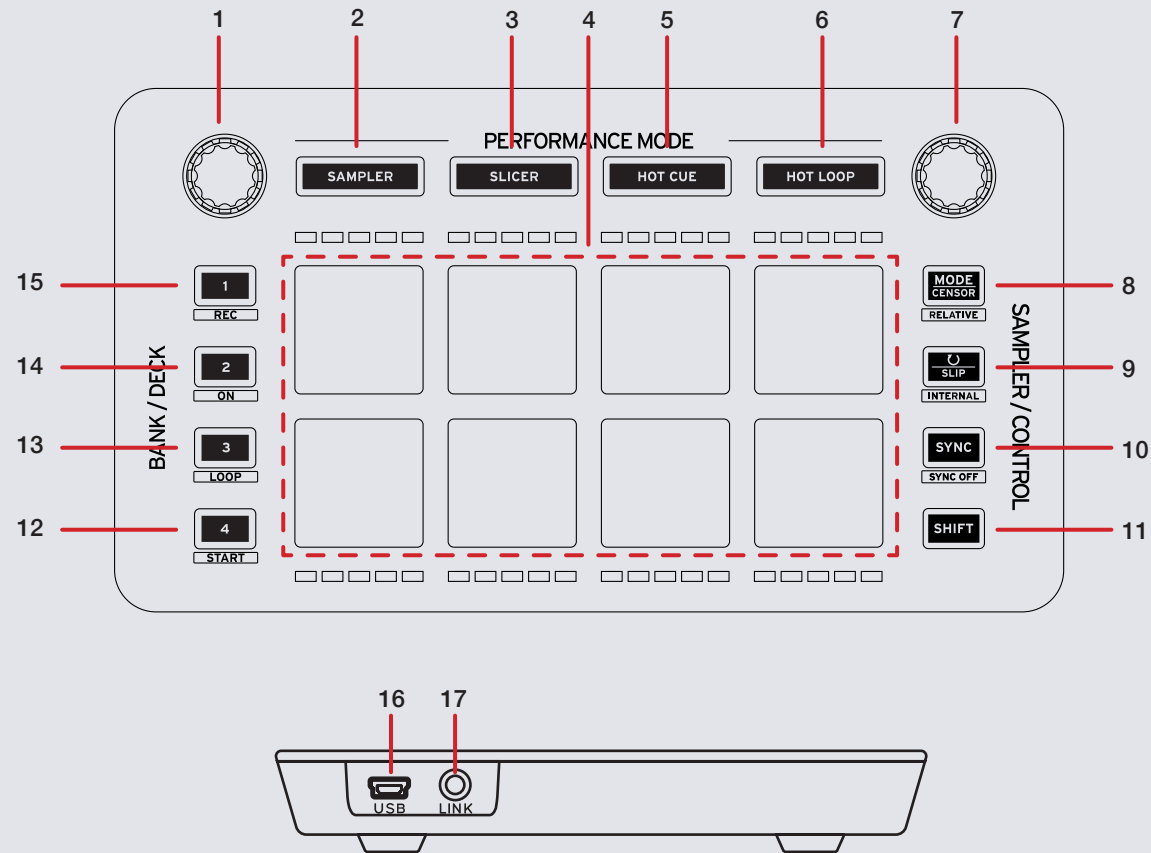

NOTE: The SHIFT button is used with other buttons that have shift modifier functions.


#	Reloop NEON Control	Function	Shift
1	LEFT DECK/BROWSER KNOB	Turn for Library scroll. Press to load track.	Turn to adjust Sampler volume. Press to toggle Back through areas.
2	SAMPLER	Press once for SAMPLER mode. Press twice for PAD FX	Enable velocity sensitivity (Pads will illuminate green)
3	SLICER	Press once for SLICER mode, press twice for LOOPED SLICER	
4	PERFORMANCE PADS	SEE PERFORMANCE PADS SECTION FOR MORE INFO	
5	HOT CUE	Press once for HOT CUE mode. Press twice for FLIP* mode	
6	HOT LOOP	Press once for HOT LOOP mode, press twice for MANUAL LOOP mode	
7	RIGHT BROWSER KNOB	Press to enable Auto Loop. Turn to adjust loop length	Turn to shift loop left or right. Press to enable loop roll.
8	MODE/CENSOR	Censor	Enables REL mode (if hardware available)
9	SLIP	Enables Slip mode	Enables INT mode
10	SYNC	Enables SYNC	Turns SYNC off. Press twice to reset to absolute pitch.
11	SHIFT	Used with other functions with Shift modifier controls	
12	BANK/DECK D	Switches to SP-6 Bank D	Arms a Flip* for recording
13	BANK/DECK C	Switches to SP-6 Bank C	Turns current Flip* On/Off
14	BANK/DECK B	Switches to SP-6 Bank B	Turns Flip* loop On/Off
15	BANK/DECK A	Switches to SP-6 Bank A	Retrigger current Flip*
16	USB	Connect the Reloop NEON to your computer with a USB Mini cable	
17	LINK	Link multiple Reloop NEONS together to use in series	

* Flip Expansion Pack is required to be purchased and activated before Flip controls are accessible. See <http://serato.com/dj/expansion-packs/flip>

serato



Performance Pads

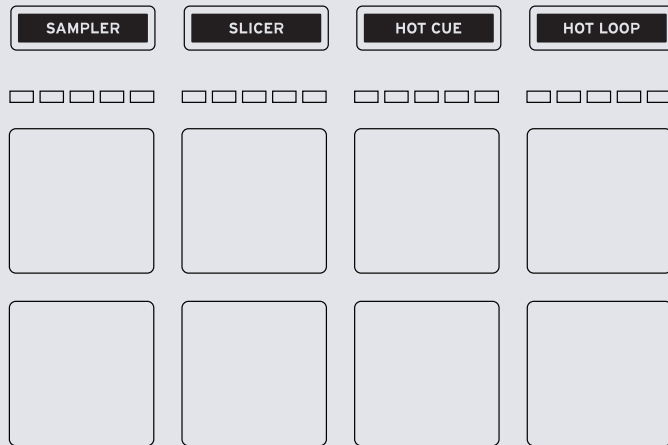

The performance pads have eight different modes you can select. The first four modes; **Sampler**, **Slicer**, **Hot Cue** and **Hot Loop** are activated by pressing the performance mode button once. The last four modes; **Pad FX**, **Looped Slice**, **Flip*** and **Manual loop** modes are activated by pressing the performance mode buttons a second time.

- **SAMPLER Mode:** Pads 1-6 Trigger Samples loaded in your Sample Banks. Holding **MODE** and pressing a pad will change the trigger type. Holding **SLIP** and pressing a pad will toggle Loop on and off for that SP-6 slot. Holding **SYNC** and pressing a pad will enable **SYNC** for that SP-6 slot. Press **SAMPLER** twice to enable **PAD FX** mode. Hold **SHIFT** and press the SAMPLER button to enable velocity sensitivity.

- **SLICER Mode:** A specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads. Pressing **SLICER** once for the first mode, is a shifting Slicer Domain. Pressing **SLICER** twice, for the second mode is a fixed Slicer Domain or **LOOPED SLICER**. Hold **SHIFT** + Press a pad to set the domain length. The domain can be set to one of six settings: 2 beats, 4 beats, 8 beats, 16 beats, 32 beats or 64 beats.
- **HOT CUE Mode:** When pressing buttons 1-8 you can add up to 8 Cue Points. Holding **SHIFT** and pressing buttons 1-8 will delete the Cue Points. Press **HOT CUE** again to enable saved **FLIP*** mode. Use this mode to save or trigger saved Flips* you have created. Pressing a pad while the current Flip* is active will save the Flip* to that slot.
- **HOT LOOP** mode: When pressing pads 1-8 you can activate saved Loops. You can also use the **AUTO LOOP** knob to set auto loops. **SEE LOOPING FOR MORE INFORMATION.** Pressing **LOOP** twice will enter **MANUAL LOOP** mode: Pressing buttons 1-8 can set, save and launch previously made Manual Loops. **SEE LOOPING FOR MORE INFORMATION.**

*Flip Expansion Pack is required to be purchased and activated before Flip controls are accessible. See <http://serato.com/dj/expansion-packs/flip>.

Looping

You have up to 8 loops per track in Serato DJ, and the choice between either manual or auto loops. When using your Reelock NEON the four different looping modes **ROLL, HOT LOOP, AUTO LOOP and MANUAL LOOP** modes can all be activated and controlled via the eight performance pads.

Hot Loop mode with Auto Loops and Loop Rolls

Hot Loop mode is one of the performance pad modes. When pressing pads 1-8 you can save active loops to empty slots or trigger previously saved loops. Use the Loop Size/Loop Set knob to set Auto Loops, Loop Rolls and change loop size.

SEE PERFORMANCE PADS FOR MORE INFORMATION.





NEON Control	Serato DJ Function	Shift
LOOP SET (press knob)	Set Auto Loop (turn on)	Enable Loop Roll
LOOP SIZE (turn knob)	Adjust Loop size	Shift Auto Loop left/right
Pads 1-8	Save active Loop to slot	Re-trigger Loop

Manual Loop Mode


Press **HOT LOOP** twice to enable **MANUAL LOOP** mode. It enables you to manually set the length of your loops, save your loops as well as launch previously saved loops.

  SEE PERFORMANCE PADS FOR MORE INFORMATION.

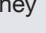

NEON Control	Manual Loop Mode	Shift
Pad 1	Turn current Loop On/Off.	
Pad 2	Not mapped.	Jump to and turn on Loop (ReLoop)
Pad 3	Save loop to next available slot	
Pad 4	Scrolls up through available loop slots	
Pad 5	Set Loop In point/Edit start of loop point (if Loop already active).	
Pad 6	Set Loop Out point/Edit end of loop point (if Loop already active).	
Pad 7	First press turns selected loop ON and moves playhead to loops start point. Second press turns loop OFF.	
Pad 8	Scrolls down through available loop slots	
LOOP SIZE	Halve/Double Loop length.	Shift Loop to the Left/Right

NOTE: You can also save a loop to the next available free loop slot in the software. To do this, either click the  button in the manual/auto loop tab or click  on an available loop slot.  ur loops are saved to the file and recalled  next time it is loaded. They are not lost if the file is moved or renamed.

DJ-FX

The DJ-FX in Serato DJ are powered by iZotope™. Click the FX tab  to open the FX panel. Select either 1, 2, 3, 4 or M to assign the selected effect bank to a deck or Master Output.

There are two available modes in the DJ-FX. Single FX Mode allows you to select one effect per FX bank, and has multiple parameters that can be adjusted. Multi FX Mode allows you to select up to three effects per FX bank, and adjust only one parameter, the FX Depth. The same effects available in Single FX mode are available in Multi FX mode, as well some additional presets.

You can select between the two FX modes by clicking either the Single FX mode button  or Multi FX mode button  in the software.

On the ReLoop NEON, press **SAMPLER** mode twice to enable **PAD FX** mode. Pads are velocity sensitive when controlling FX or adjusting FX parameters.

NEON Control	Multi FX Mode	Single FX Mode	Shift
Pads 1-3	FX Unit 1 Effect On/Off. Velocity Sensitive.	FX Unit 1 Effect On/Off/Parameter Adjust.	Effect Select FX Unit 1
Pad 4	Adjust Beats value left	Adjust Beats value left	N/A
Pads 5-7	FX Unit 2 Effect On/Off. Velocity Sensitive.	FX Unit 1 Effect On/Off/Parameter Adjust.	Effect Select FX Unit 2
Pad 8	Adjust Beats value right	Adjust Slot 1 FX Parameter	N/A

Serato Flip


Flip is an Expansion Pack for Serato DJ. Flip controls are only available once the Flip expansion pack has been purchased and activated. The expansion pack can be purchased in-app through the Serato DJ Online window, or online at <http://serato.com/accessories>


In **HOT CUE** performance pad mode **SHIFT + BANK/DECK** buttons are used to record, trigger and loop Flips.

NEON Control	Flip function
SHIFT + 1 (REC)	Starts the recording of a new Flip
SHIFT + 2 (ON)	Starts the current Flip / re-trigger Flip
SHIFT + 3 (LOOP)	Turns Flip Loop on/off
SHIFT + 4 (START)	Turns current Flip On/Off

Press **Hot Cue** mode twice to enter Flip performance pad mode. Pressing pads 1-6 in will trigger saved Flips, pressing **SHIFT** + pads 1-6 will turn saved Flips on/off. Pressing an empty Flip slot will save any active Flip to that slot.

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in between the MIDI and setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ, please go to our website www.serato.com or refer to the Serato DJ Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj/support

serato

